


The parts of your NOR Handlabeller

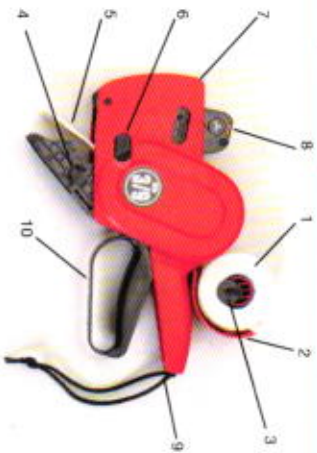

1. Label Roll
2. Label Cover
3. Label Roll Lock
4. Platen, open
5. Label
6. Platen Release Knob
7. Ink Roller Release Catch
8. Print Head
9. Carry Strap
10. Handgrip & Trigger Lever

1 Loading the labels

Platen Release Knobs are on both sides of the labeller



Open the Platen by pulling both Platen Release Knobs towards you.

2 Loading the Labels



Lift up the Label Cover to prepare for loading the labels.

3 Face-In or Face-Out Labels



If the labels are "facing inwards" the labels should enter the labeller from a clockwise direction.



If the labels are "facing outwards" the labels should enter the labeller from an anti-clockwise direction.

4 Loading the Labels



Fit the Label Roll onto the Label Holder and check that the Label Lock is in place to secure the roll.

5 Loading the Labels



To make loading easier the start of the labels can be folded into a "U" shape.

Feed the labels through the body of the labeller passing over the **LABEL** indicator. Allow about 10cms of labels to hang underneath the labeller.

6 Loading the labels



CLOSE THE LABEL COVER & THE PLATEN

Remove the labels from the visible backing paper & feed the backing paper into the slot marked **LABEL**

The labels should be gripped by the two teeth inside the Label Feed mechanism.

7 Loading the Labels



Squeeze the Trigger several times to wind the labels into the mechanism and to take up the excess backing paper. Tear-off any excess paper. The labels are now loaded.

TO REMOVE A LABEL ROLL, open the Platen and the Label Holder and take out the Label Roll.

8 Setting the Print Characters



Selector Knob

NOTE:
Only the characters with a yellow background should be selected

1. Move the Selector Knob in or out to choose one of the print bands.
2. Rotate the Selector Knob to select the required character at the Index position.
3. Return the Selector Knob to it's start position at the left.
4. Print a label to check that the characters and price are correct.

NOR 3/9 HANDLABELLER USER GUIDE




Genuine SATO Labels and Ink Rollers will give the best performance.

Please call SATO for Labels, Ink Rollers and Service


SATO UK Ltd., Valley Road, Harwich,
Essex CO12 4RR Tel: 01255 240000

Plain, coloured and pre-printed labels are available for the NOR 3/9 in these designs

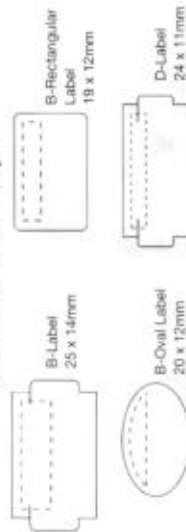

www.sato-uk.com

12 Cleaning the Labeller

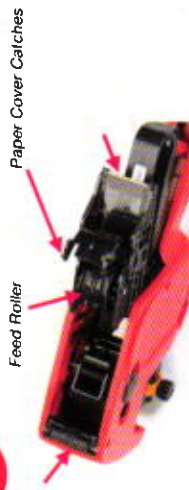

Squeeze & lift the 2 Paper Cover Catches to expose the Feed Roller.

Clean all of the shown parts using a cotton swab or lint-free cloth dipped in a weak solvent such as alcohol.

13 Print Misalignment



If the labeller is dropped it is possible that the print out may shift upwards or downwards.

If this happens, loosen the Print Head fixing screw using a small Phillips screwdriver and move the Print Head until the arrow (1) aligns with guide mark (2). Tighten the screw.

14 Troubleshooting

In the event of malfunction, please try the following suggestions. If these do not resolve the problem, please contact your supplier.

- Labels do not feed properly:**
 - Check that you are using genuine SATO labels
 - Try re-loading the labels
 - Clear any build-up of paper-dust or adhesive inside the labeller
- The print position is wrong:**
 - Adjust the print position as shown in step 13
- No or weak print:**
 - Replace the ink roller
- Dots or dust spots appear on the printed labels:**
 - Clean the Front Roller removing any ink or dust



9 Operating the Labeller



Squeeze the Trigger to eject a printed label at the front of the labeller.

Apply the label onto the product with a backwards stroke ensuring that all of the label is adhered.

10 Removing the Ink Roller

FOR BEST PERFORMANCE AND RELIABILITY USE ONLY
GENUINE SATO INK ROLLERS



Hold the right-hand side of the labeller over a waste container.
Pull up the Ink Roller Release Catch and allow the old Ink Roller to fall out.

11 Fitting the New Ink Roller



NOTE:
The new Ink Roller is supplied in a protective capsule

- Remove the cap from the new Ink Roller capsule.
- Pull and hold up the Ink Roller Release Catch.
- Insert the open end of the capsule into the Ink Roller Slot and allow the new Ink Roller to drop into the labeller.
- Release the Ink Roller Release Catch.